

User's guide : La Twin, Chez Maman Timepieces



The crown is for setting the hands (C)

Water resist 3ATM

Setting the digital

Press C 3 times

Press B : minutes blink, press D to set minutes

Press B : hours blink, press D to set hours

Press B : day blink, press D to set the day

Press B : month blink, press D to set month

Press B : day of the week blink, press D to set the day
to save and exit press A

Setting daily alarm

Press A 2 times : a little "H" letter appears to the right

Press B : minutes blink, press D to set minutes

Press B : hours blink, press D to set hours

to save and exit press A

Setting off the daily alarm : press B and D at the same time

Setting off the hourly beep : press B (long press), then, at the same time, press quickly A

Stopwatch operation :

Press A : you're in the chrono mode.

Press D : stop / start chrono

Press B : re-start